

# VISION PLUS

## Quick Release TV Bracket

Short Arm. 07-5170/5


The Wall Bracket is designed to screw to a mounting surface, which must be of a suitable load bearing strength to support the combined weight of the TV and Wall Bracket.

**VERY IMPORTANT**  
Should the mounting surface lack strength, add a suitable block to the rear of the surface for additional rigidity.

Firstly, decide on the location of the bracket. Using the Wall Plate as a template, mark the three holes and drill 3 pilot holes.

**IMPORTANT:** - Please ensure the wall plate is level before drilling.

- Secure the Wall Plate with 3 sets of washers and screws provided as indicated below.

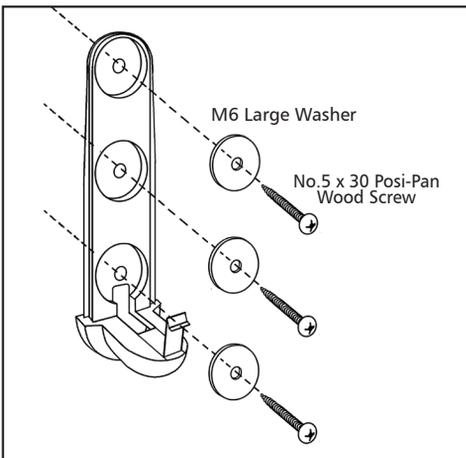

- Now, slide the Wall Bracket assembly down over the Wall Plate until it 'clicks' into place.




### QUICK RELEASE TV BRACKET

- Attach the TV Bracket to your TV with the 4 sets of fixings provided as indicated below.


**IMPORTANT:** - Please check the VESA holes in the TV are deep enough to accommodate the bolts supplied.

- Then slide your TV onto the Wall Bracket. washers and screws provided as indicated

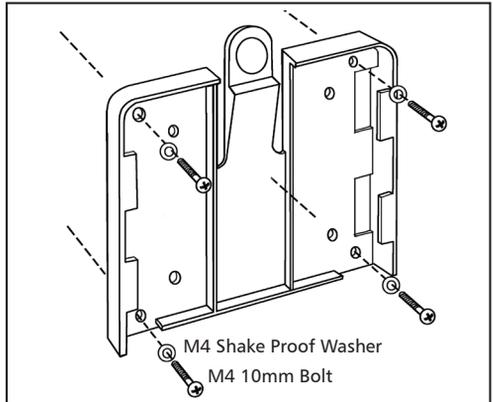

### VERTICAL VIEW

- To adjust the TV's vertical viewing angle, loosen the central bolt as indicated and tighten. There is a  $\pm 10$  degree adjustment.

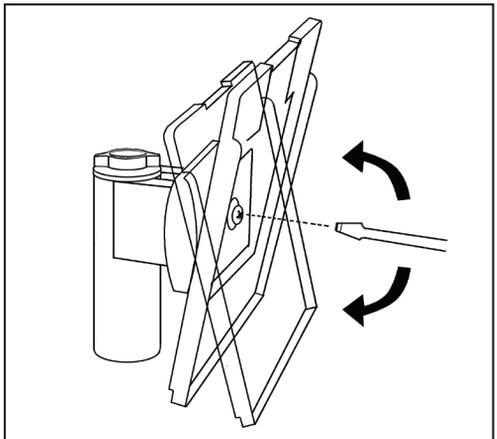

**IMPORTANT:** - Once adjusted, please ensure your TV doesn't catch on the mounting surface.

#### HORIZONTAL VIEW

To adjust the TV's horizontal viewing angle, loosen the wing nut, adjust and then re-tighten to prevent movement.

**Please refer to the annotated image on the back of the retail box for additional information.**

#### IMPORTANT WHEN TRAVELLING

**Please tighten the wing nut on the hinge to prevent the TV moving when travelling.**

**VISION PLUS**  
*...keeping you in the picture*

VISION PLUS  
8 Finch Close  
Lenton Lane  
Nottingham NG7 2NN  
0115 986 7151  
info@visionplus.co.uk  
www.visionplus.co.uk

VISION PLUS is a trading name of Grade UK Limited

---

#### HORIZONTAL VIEW

To adjust the TV's horizontal viewing angle, loosen the wing nut, adjust and then re-tighten to prevent movement.

**Please refer to the annotated image on the back of the retail box for additional information.**

#### IMPORTANT WHEN TRAVELLING

**Please tighten the wing nut on the hinge to prevent the TV moving when travelling.**

**VISION PLUS**  
*...keeping you in the picture*

VISION PLUS  
8 Finch Close  
Lenton Lane  
Nottingham NG7 2NN  
0115 986 7151  
info@visionplus.co.uk  
www.visionplus.co.uk

VISION PLUS is a trading name of Grade UK Limited

---